

Installation

1. Tools you may need to prepare for installation.



Electric drill



6mm Broach



Hammer



Tape



Pencil



Cross screwdriver

2. Accessories in the Packaging.



Brackets



4mm Tapping screws




6mm Expansion pipes


3. Steps to install.



① Measure and confirm positions of brackets to install, mark it down.

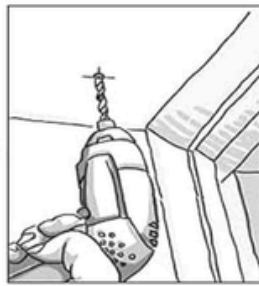


② Drill holes on the marked position. (For solid wall only, if the install position is in wood, Skip to step ③)

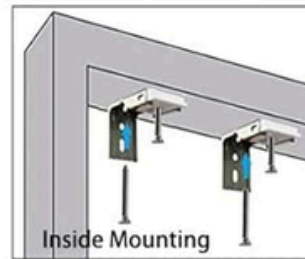

③ Fix brackets on the wall with Tapping screws, (Each brackets requires at least 2 screws to fix, screw direction is different base on inside or outside mount.)




Outside Mounting

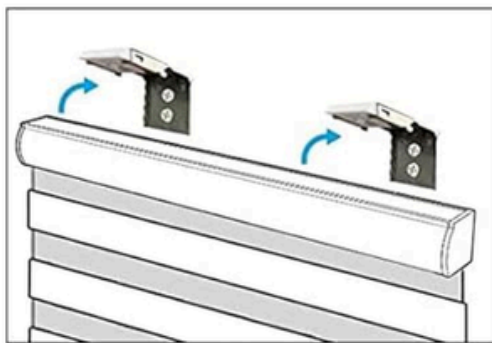

④ Mount Shades on the brackets.




⑤ Double check if the shade is firmly installed. Then gently pull to test the shade. Everything goes well, intallation completed.

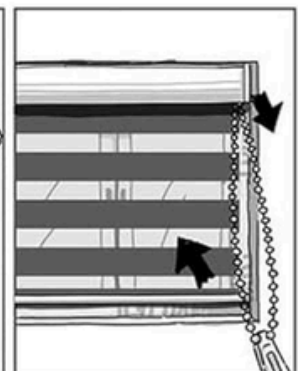


Rail installation

1. Place the head of the blind on the back hinge

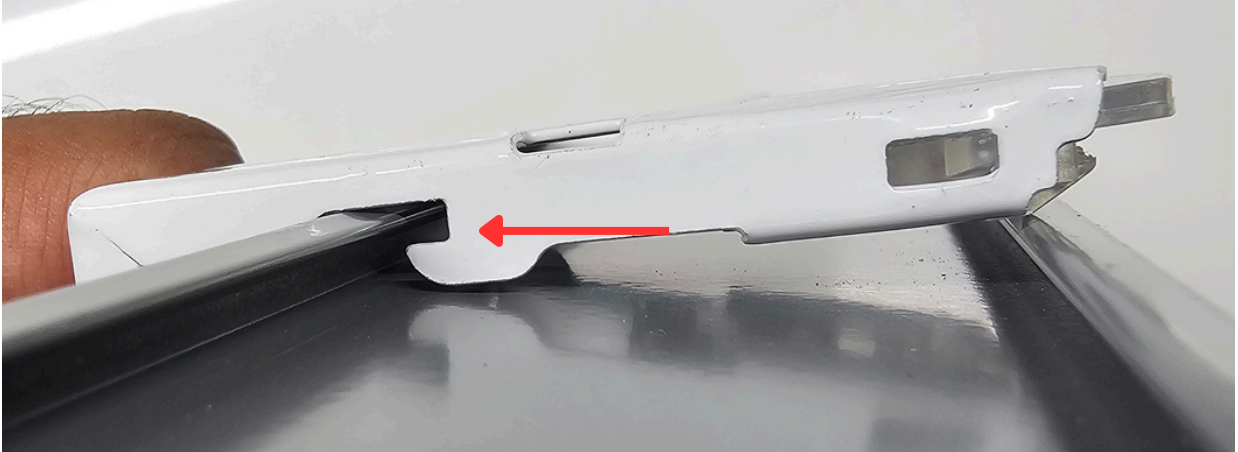

2. Slot into the hinge

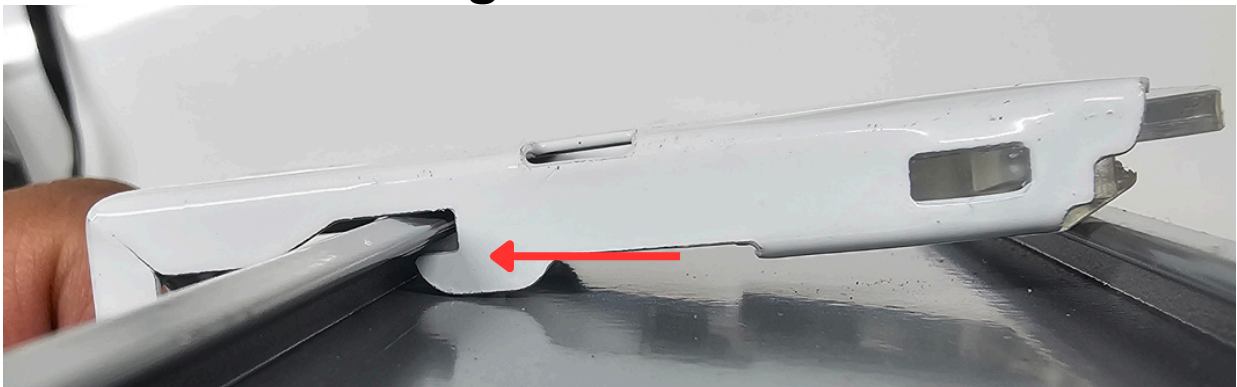

3. Push headrail upwards firmly to click into place.

